

PATIENT EDUCATION



Adding A Filter To Your I.V. Tubing

Properly administering your medication at home is important to your safety. In the event of an emergency, call 911.

When mixing an I.V. medication at home and the tubing does not have an *in-line* filter, it is necessary to connect an add-on filter to the administration tubing.

Attaching the *add-on* filter to the administration tubing:

1. Wash hands thoroughly, for at least 20 seconds.
2. Remove the protective cap from the shorter length of tubing on the filter.
3. Remove the protective cap from the end of the administration tubing. Be careful to keep the exposed end sterile.
4. Using a twisting motion, attach the filter tubing to the administration set tubing.
5. When priming the IV tubing, invert the filter to fill completely.
6. Wash hands thoroughly, for at least 20 seconds.

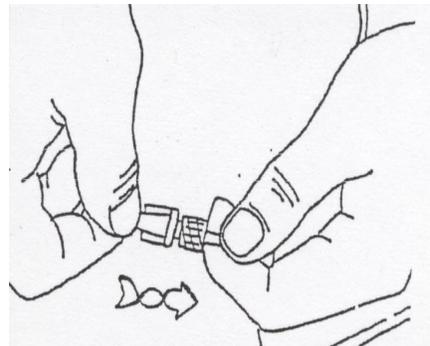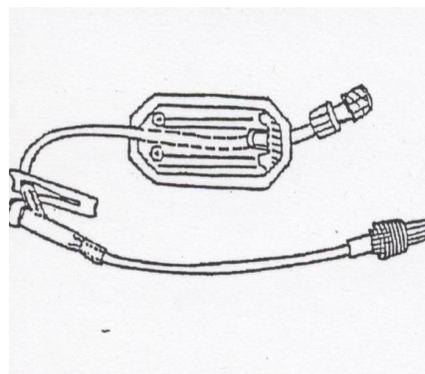

CAREPATHrx

The information included in this document is intended for informational and educational purposes only. It is not intended to replace medical advice offered by a physician or other qualified health provider. If you think you are experiencing a medical emergency, call 911 immediately.

Copyright© 2021 by CarepathRx. All rights reserved.